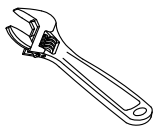
Model Name: WÖRGL
FREE-STANDING TUB FILLER
Model No: BF.WL.2100.XX


VOGTINDUSTRIES.COM


Before you begin:

- Please take note of different standards and regulations that are dictated by your local plumbing codes. This product is certified in accordance with North American building codes.
- We insist that you use services of a professional plumber with experience in the installation of similar fixtures.
- Ensure that the piping system is well secured to prevent rattling, vibration and banging noises caused by a water hammer. We also recommend that you use water hammer arrestors.
- Remove the cartridge,Purge the water supply system for around 30 seconds, and then carefully reinstall the cartridge.

Tools and equipment you will need:

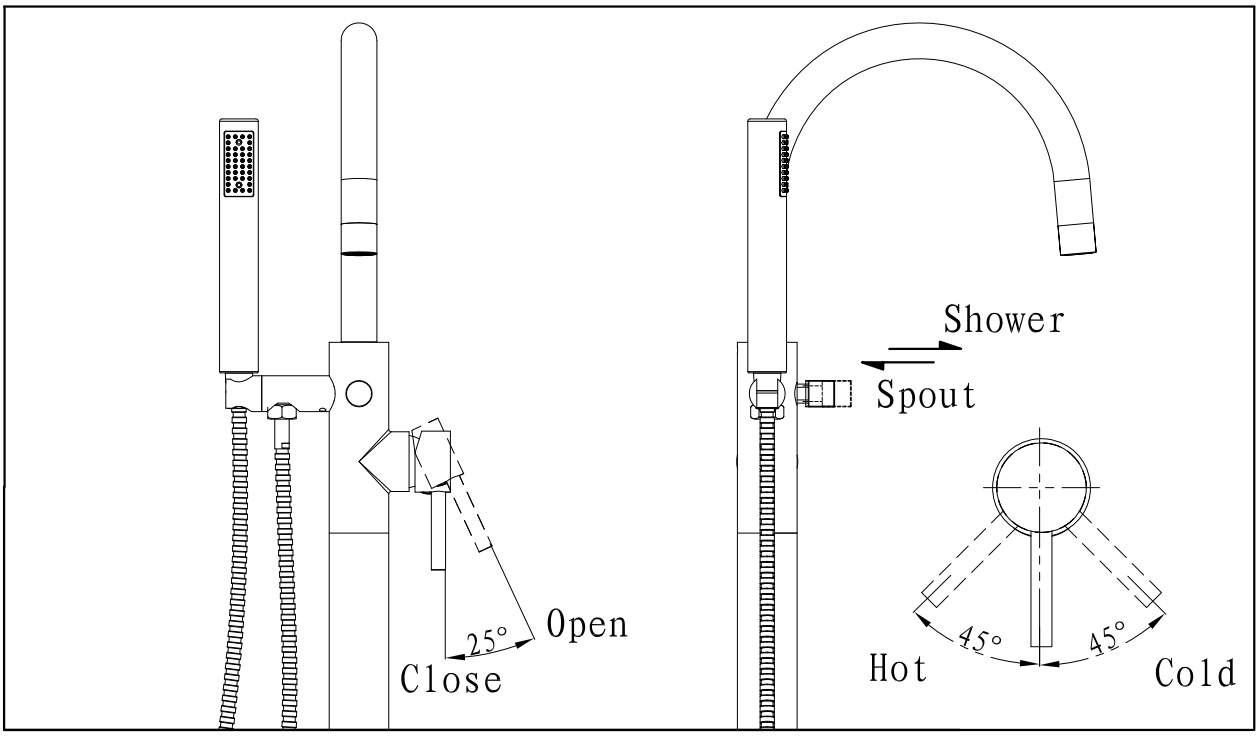
A 

B 

C 

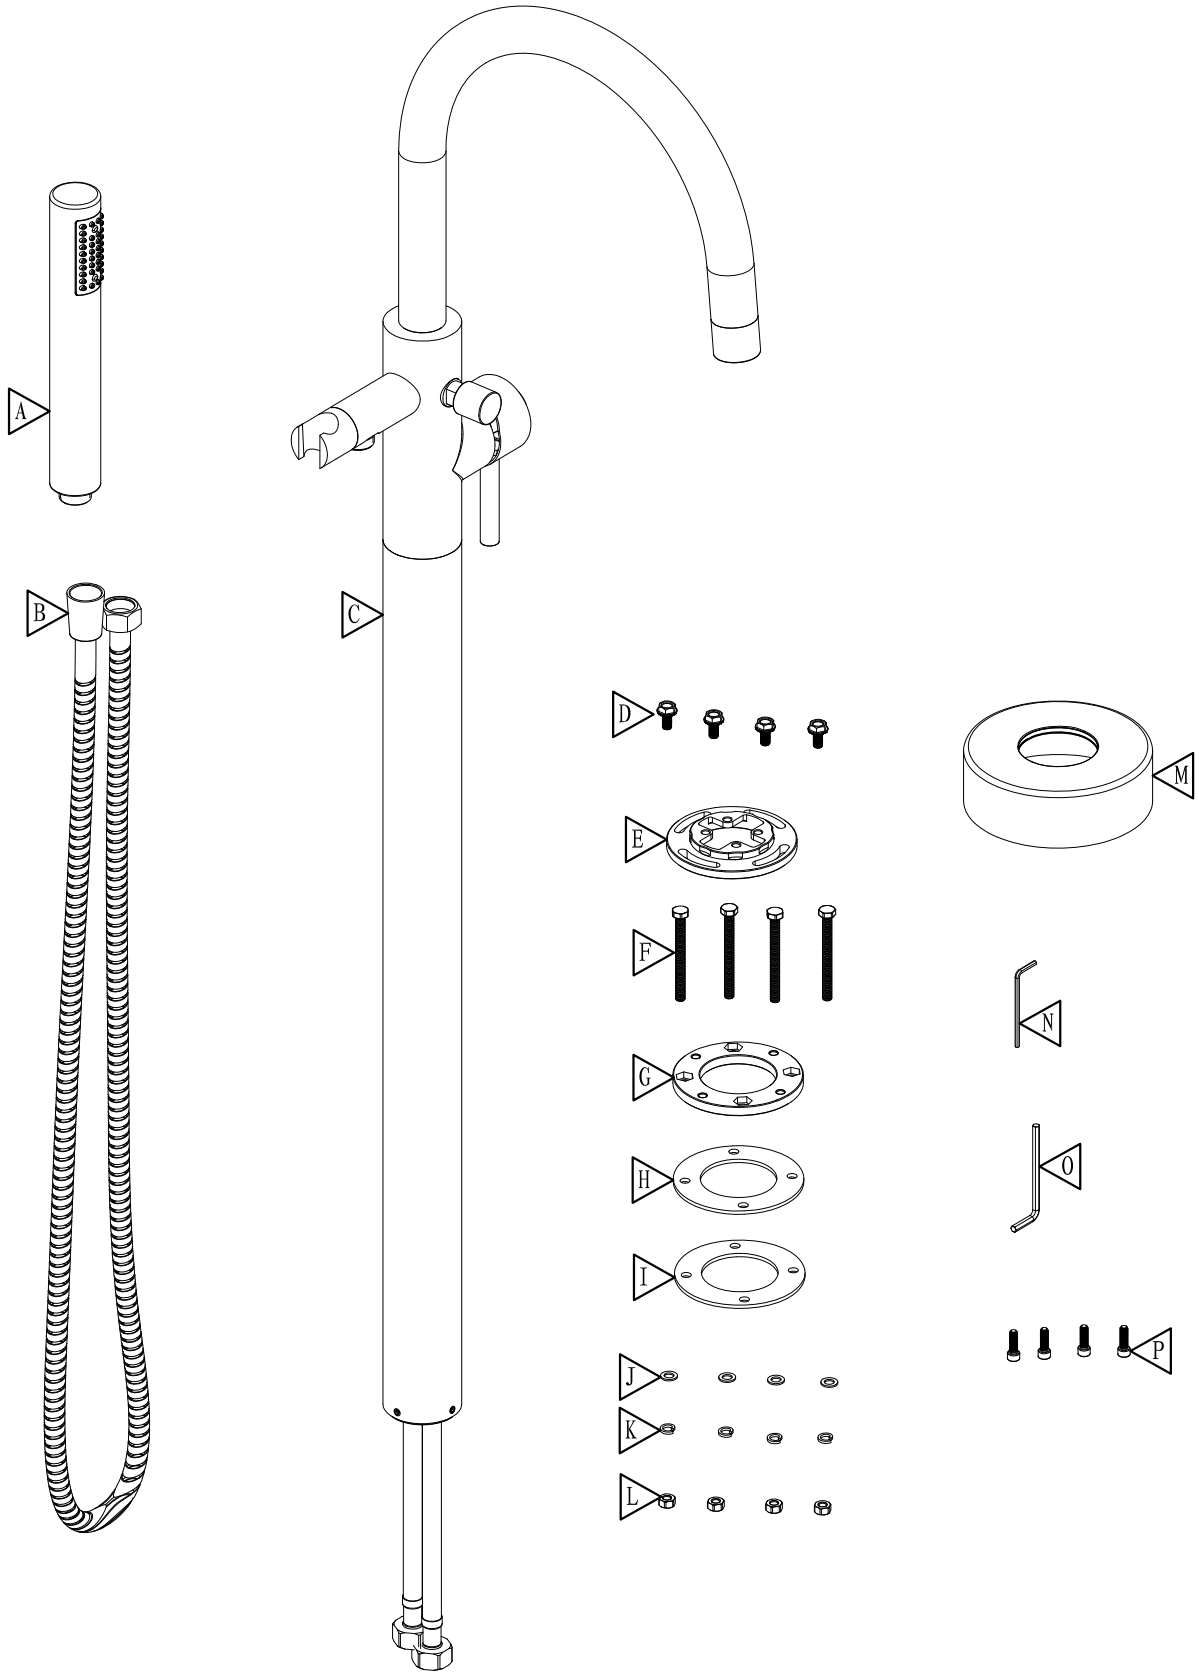
D 

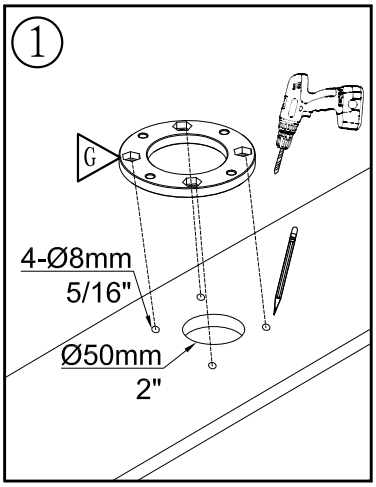
Waterway diagram:

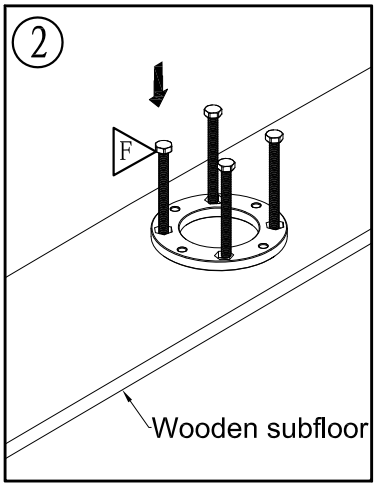


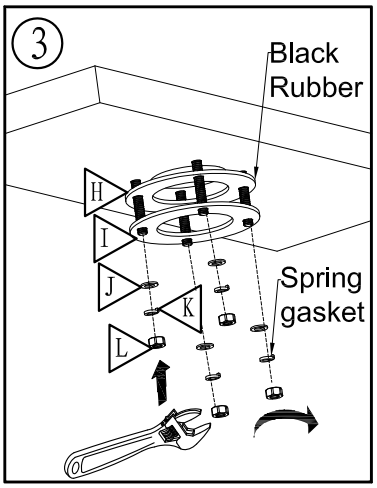
PURE QUALITY AND DESIGN

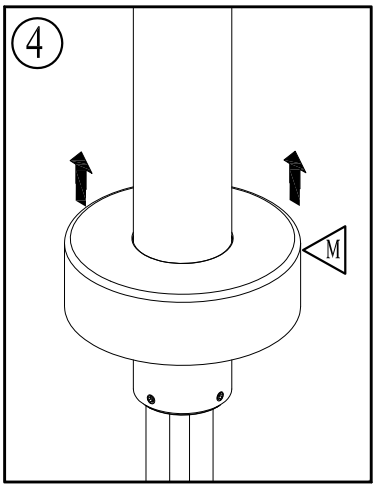
Parts/Assembly
Model Name: WÖRGL
FREE-STANDING TUB FILLER
Model No: BF.WL.2100.XX

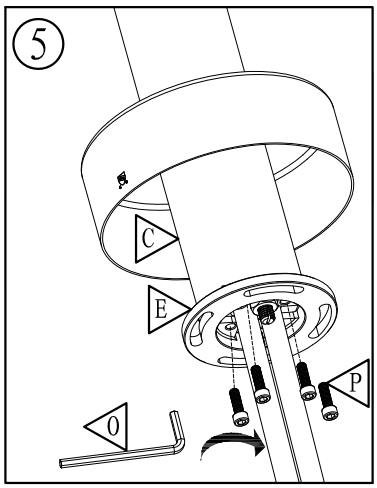


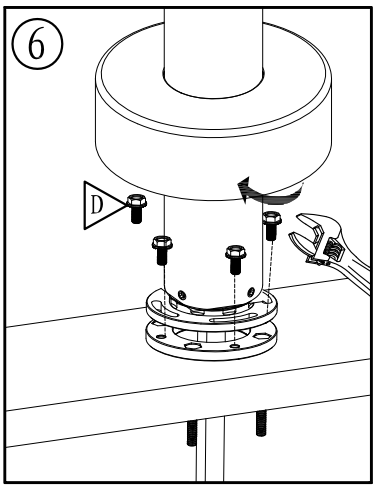

1
G
4-Ø8mm
5/16"
Ø50mm
2"

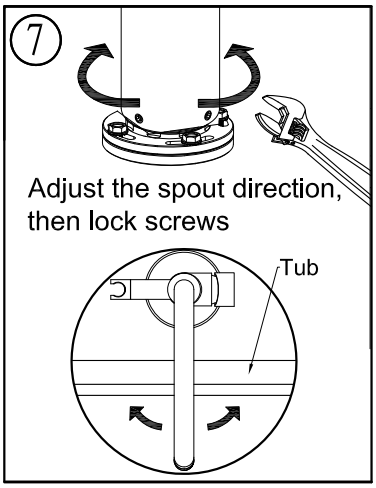

2
F
Wooden subfloor

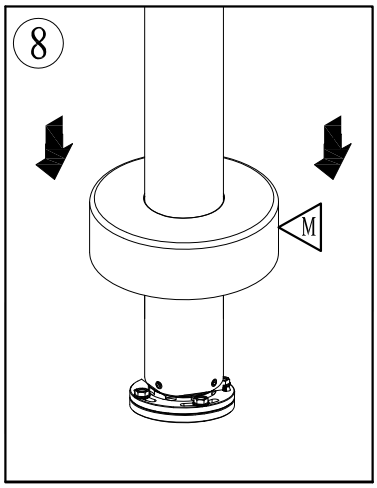

3
Black
Rubber
H
I
J
K
L
Spring
gasket

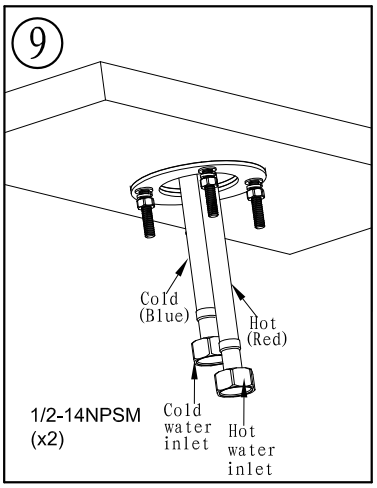

4
M

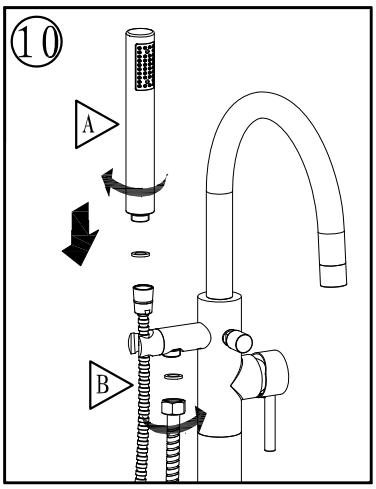

5
C
E
P
O

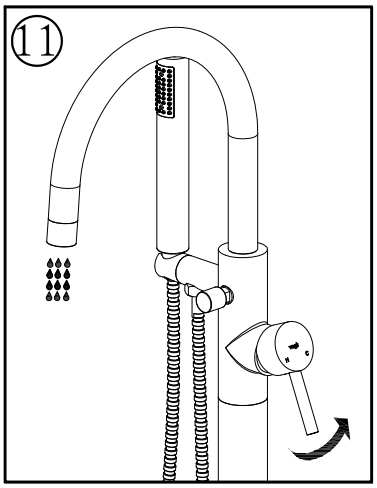

6
D

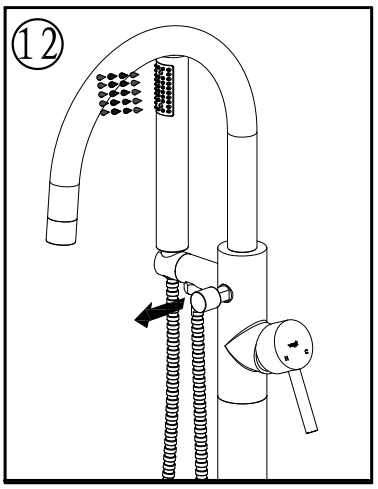

7
Adjust the spout direction,
then lock screws
Tub


8
M


9
Cold
(Blue)
Hot
(Red)
1/2-14NPSM
(x2)
Cold
water
inlet
Hot
water
inlet


10
A
B


11


12