


Installation Instructions

UNDERMOUNT STAINLESS STEEL SINKS


VOGT INDUSTRIES (“**VOGT**”) strongly recommends professional countertop installers for sink installation and licensed/experienced professionals for plumbing installation and is not responsible for damage to the countertop or sink during installation (please see **VOGT** warranty for details).

Undermount sinks are installed from below the countertop. The instructions that follow are for installing a **VOGT** sink in a solid surface countertop only.

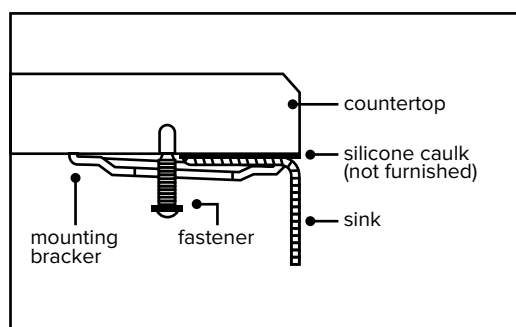


1. Unpack the new sink and check the contents of the materials supplied: sink, strainer(s) and cutout template.
2. Inspect the sink for damage. Do not install a damaged unit.
3. Make sure the cutout template is the same size as the sink. Place template in a desired position on your countertop.


4. Trace the outline of the template and cut the countertop according to the outline using appropriate cutting tools. **Please note: template is to be used as a guide only.** Use actual physical sink to ensure accurate cutout.

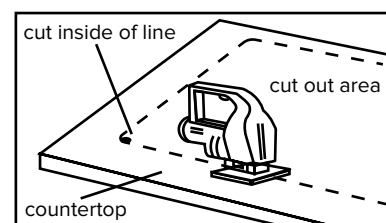

5. Drill holes for the undermount clips on the underside of the countertop approximately 1” from the cutout edge. Holes should be evenly spaced approximately 6” to 8” apart starting from every corner. It is recommended to install a faucet at this point before installing the sink.

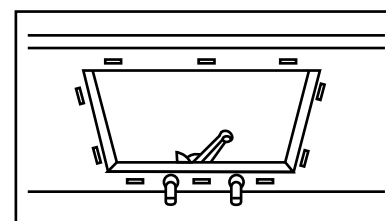

6. Clean the top flange of the sink making sure that the area is smooth and free of grease. Apply continuous bead of silicone caulk evenly on top of the sink flange and position the bowl in the countertop.

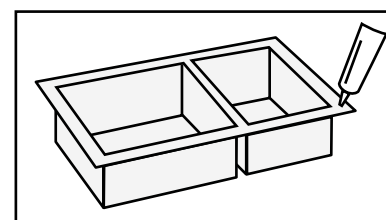

7. Tighten the clips to secure the sink. Wipe away excess silicone caulk with damp cloth. Connect drain and water supply.

