

Model Name: KAPFENBERG 3/4" TH  
SHOWER SYSTEM  
Model No: SET.KG.140.330.XX


**vogt**

VOGTINDUSTRIES.COM

### Before you begin:

- Please take note of different standards and regulations that are dictated by your local plumbing codes. This product is certified in accordance with North American building codes.
- We insist that you use services of a professional plumber with experience in the installation of similar fixtures.
- Ensure that the piping system is well secured to prevent rattling, vibration and banging noises caused by a water hammer. We also recommend that you use water hammer arrestors.
- Ensure that the interior of the water pipes is clean from debris, sand, solder and any other residue.
- Always remove cartridges and other valve components before welding. Purge the water supply system for around 30 seconds, and then carefully reinstall the cartridges.

### Tools and equipment you will need:

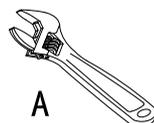


A



B




C




D



E

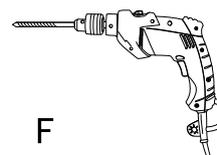

F



G



H

### Waterway diagram:

