

Model Name: WÖRGL 3/4" TH  
SHOWER SYSTEM  
Model No: SET.WL.140.320.XX


**voigt**

VOGTINDUSTRIES.COM


**Before you begin:**

- Please take note of different standards and regulations that are dictated by your local plumbing codes. This product is certified in accordance with North American building codes.
- We insist that you use services of a professional plumber with experience in the installation of similar fixtures.
- Ensure that the piping system is well secured to prevent rattling, vibration and banging noises caused by a water hammer. We also recommend that you use water hammer arrestors.
- Ensure that the interior of the water pipes is clean from debris, sand, solder and any other residue.
- Always remove cartridges and other valve components before welding. Purge the water supply system for around 30 seconds, and then carefully reinstall the cartridges.

**Tools and equipment you will need:**

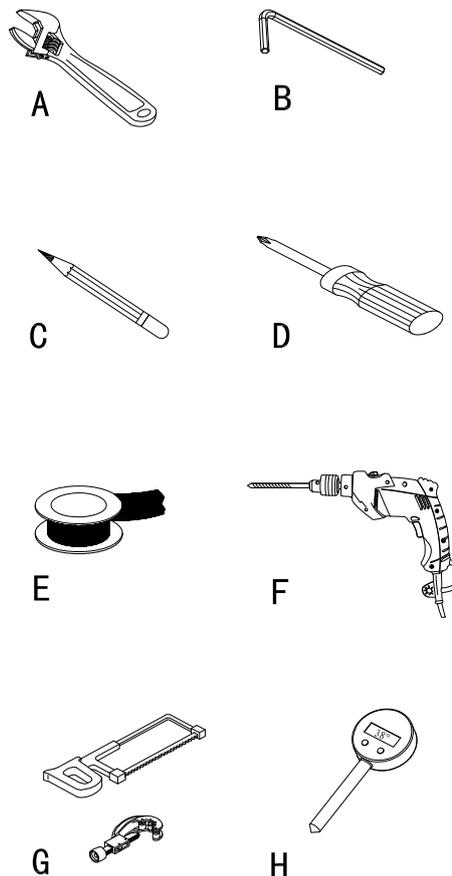


**Waterway diagram:**

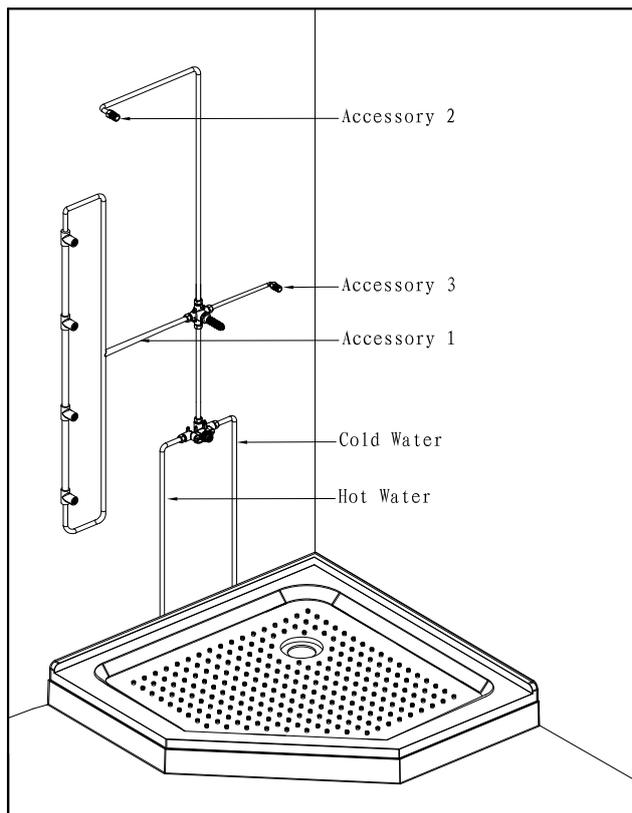

Accessories 1 & 2 can work at the same time.

Accessories 2 & 3 can work at the same time.

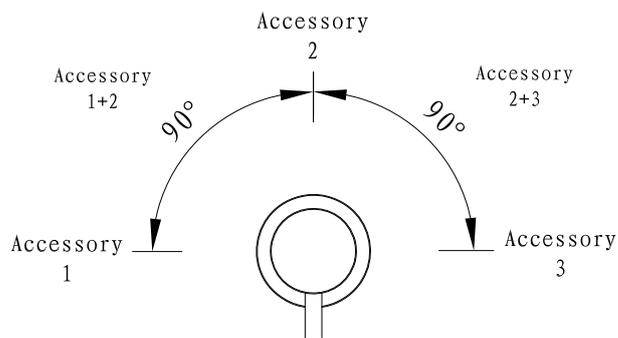

# vogt

PURE QUALITY. PURE DESIGN.

Parts/Assembly

Model Name: WÖRGL 3/4" TH  
SHOWER SYSTEM  
Model No: SET.WL.140.320.XX

