


Model Name: WÖRGL EXPOSED
2-WAY TH SHOWER SYSTEM
Model No: SET.WL.221.211.XX

vogt
VOGTINDUSTRIES.COM


Before you begin:

- Please take note of different standards and regulations that are dictated by your local plumbing codes. This product is certified in accordance with North American building codes.
- We insist that you use services of a professional plumber with experience in the installation of similar fixtures.
- Ensure that the piping system is well secured to prevent rattling, vibration and banging noises caused by a water hammer. We also recommend that you use water hammer arrestors.
- Ensure that the interior of the water pipes is clean from debris, sand, solder and any other residue.
- Always remove cartridges and other valve components before welding. Purge the water supply system for around 30 seconds, and then carefully reinstall the cartridges.


Tools and equipment you will need:

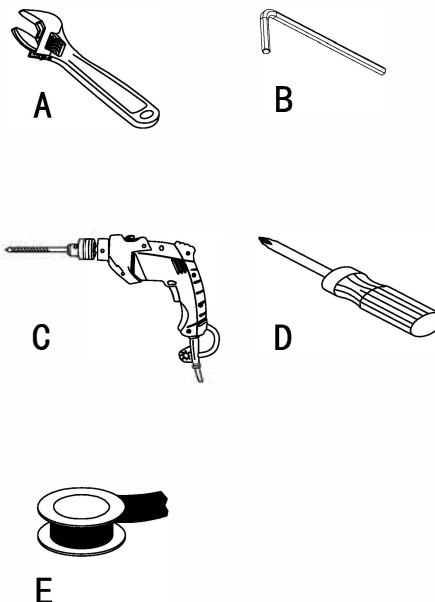

Waterway diagram:

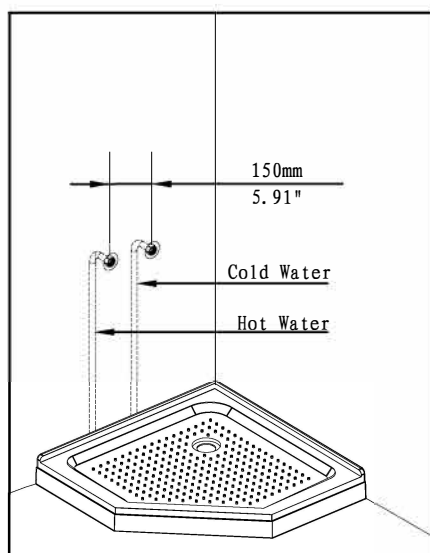

Accessories 1 & 2 cannot work at the same time.

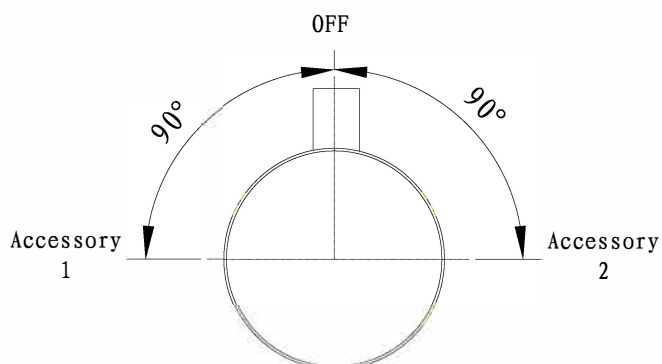


vogt





PURE QUALITY. PURE DESIGN.

Parts/Assembly

Model Name: WÖRGL
EXPOSED 2-WAY TH
SHOWER SYSTEM

Model No: SET.WL.221.211.XX

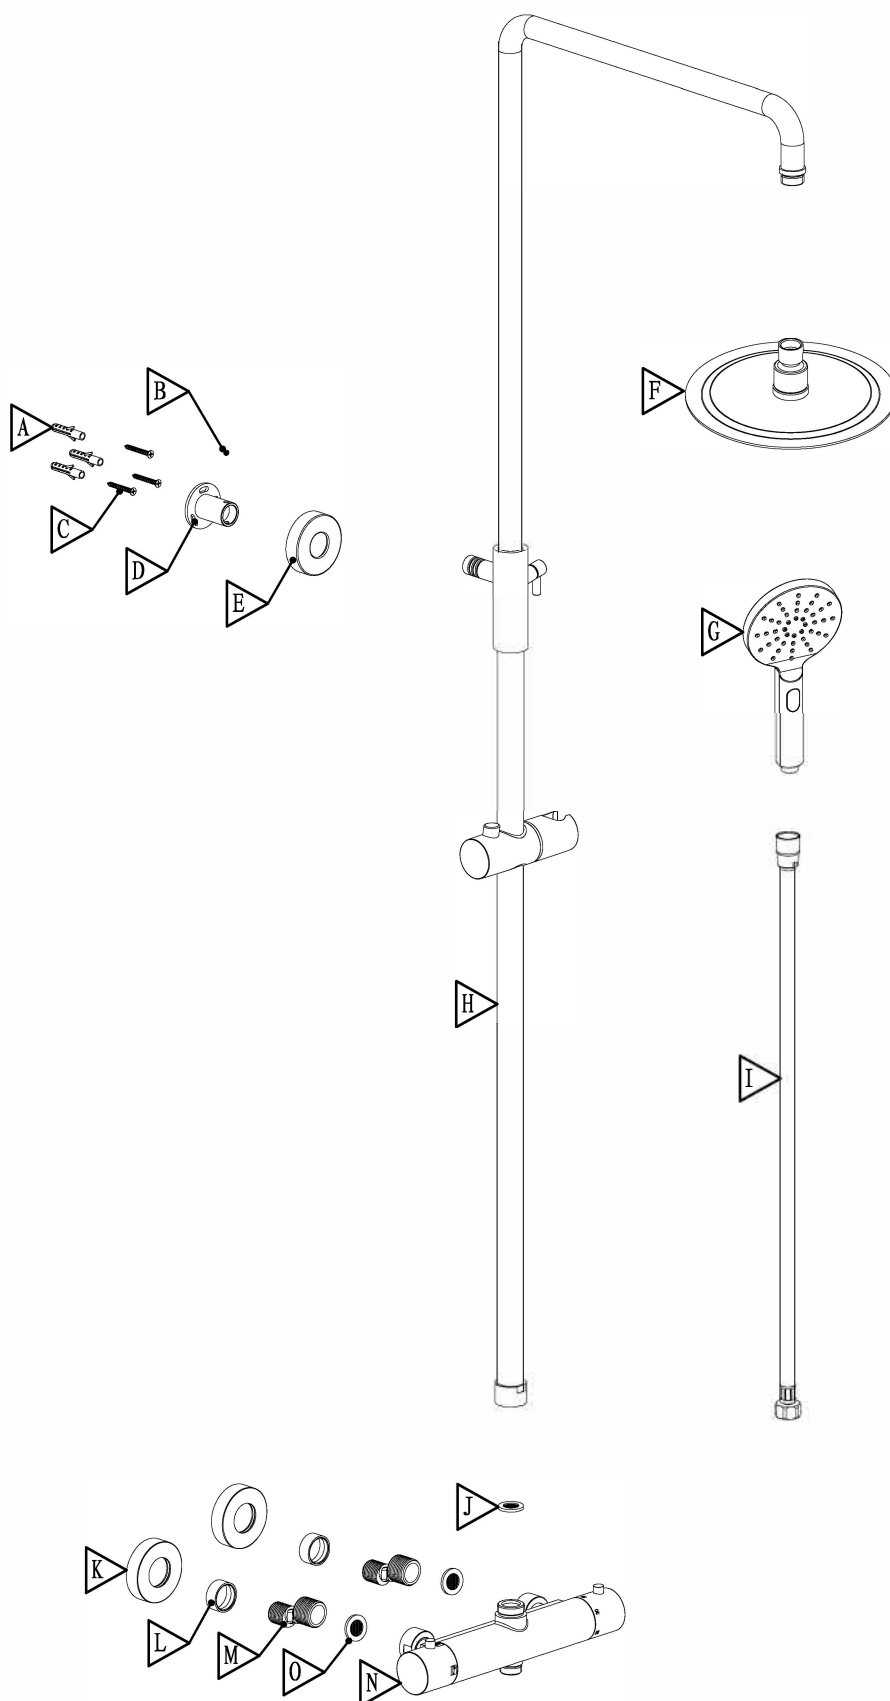

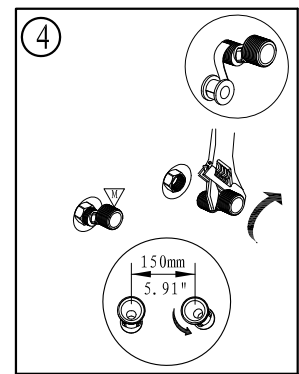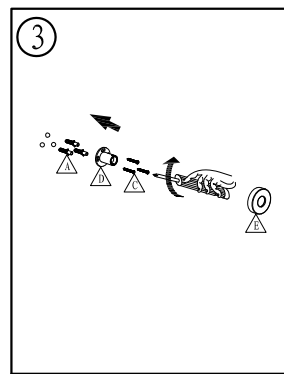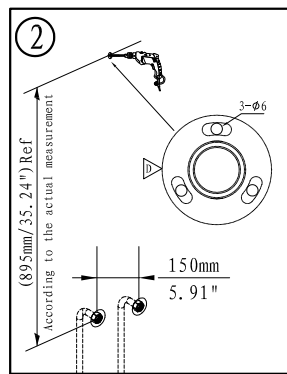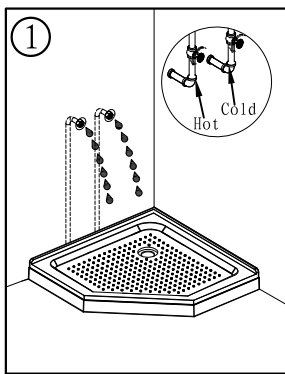

Purge the water supply system for around 30 seconds.

