

Model Name: DORNBIRN X MINI  
Model No: KF.13DX.1214

**vogt**  
VOGTINDUSTRIES.COM

### Before you begin:


- Please take note of different standards and regulations that are dictated by your local plumbing codes. This product is certified in accordance with North American building codes.
- We insist that you use services of a professional plumber with experience in the installation of similar fixtures.
- Ensure that the piping system is well secured to prevent rattling, vibration and banging noises caused by a water hammer. We also recommend that you use water hammer arrestors.
- Remove the cartridge, Purge the water supply system for around 30 seconds, and then carefully reinstall the cartridge.

### Tools and equipment you will need:


A



B

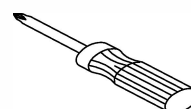

C

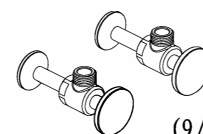


(9/16-24UNEF)

D



### Waterway diagram:

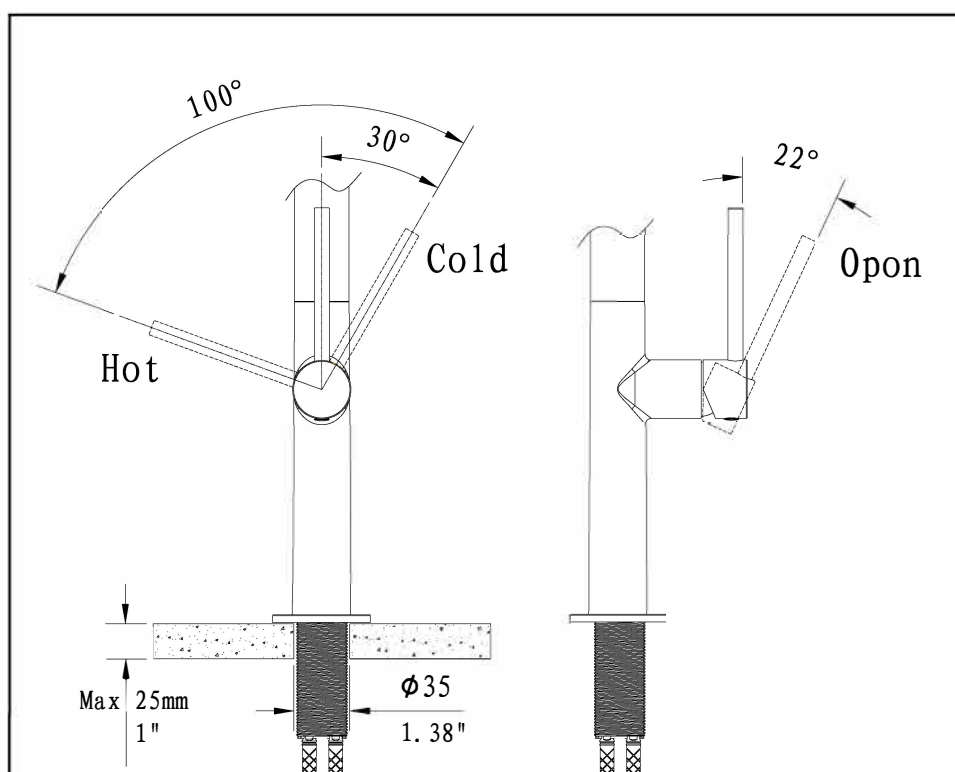

**vogt**

PURE QUALITY. PURE DESIGN.

Parts/Assembly

Model Name: DORNBIRN X MINI

Model No: KF.13DX.1214

