




HOW TO INSTALL BRACKETS TO VE.250/350/450 VALVE

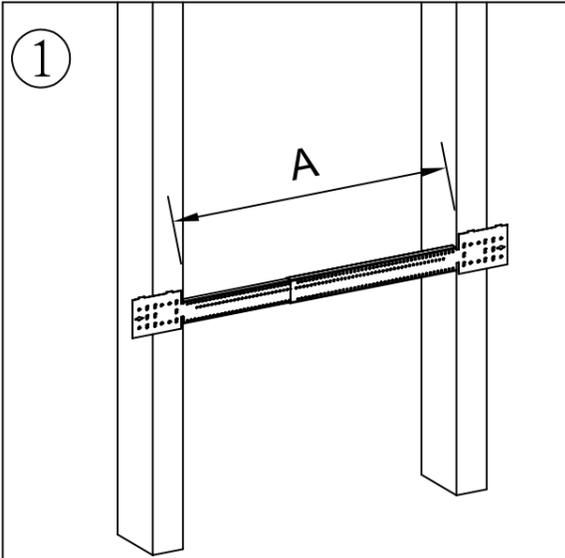


1 Measure the distance(A) between your studs. Grab provided brackets adjust accordingly to the distance measured.

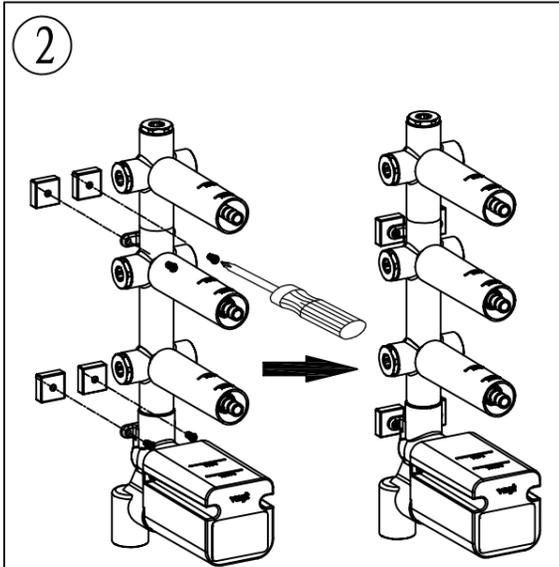


2 Grab your valve which comes with the square nut and screws pre installed.

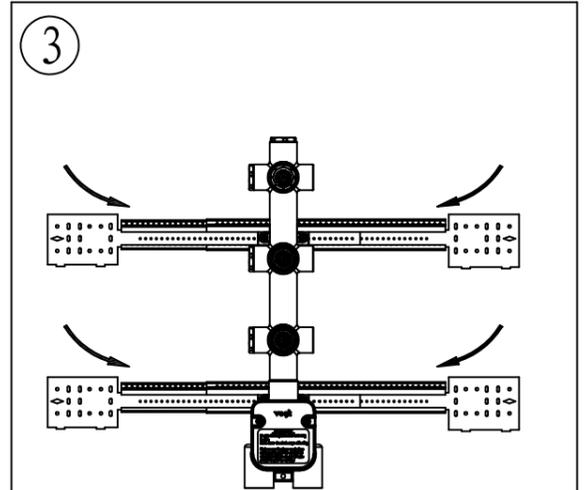


3 Once you have your valve, adjust the valve to the center of the bracket, by sliding the square nuts through the slot opening of your brackets.

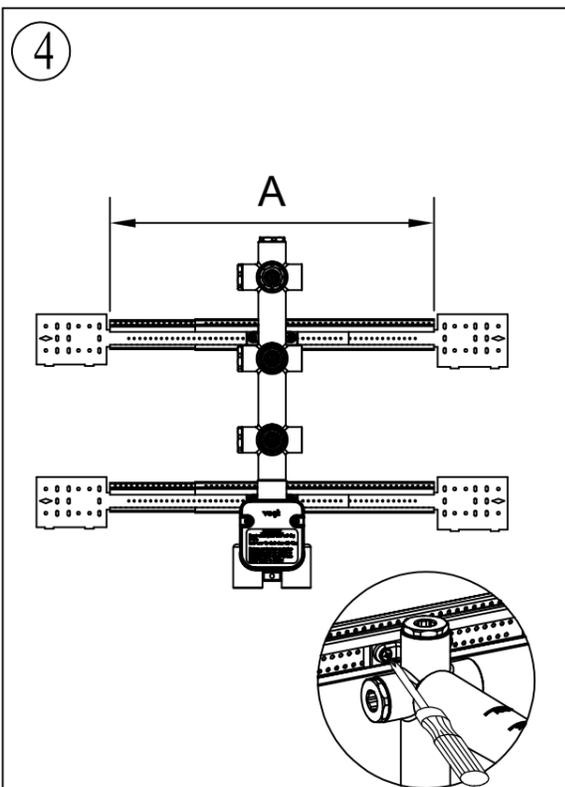

4 Once you have remeasured the length of brackets to the length of the stud frame. Fasten the valve body to the brackets.

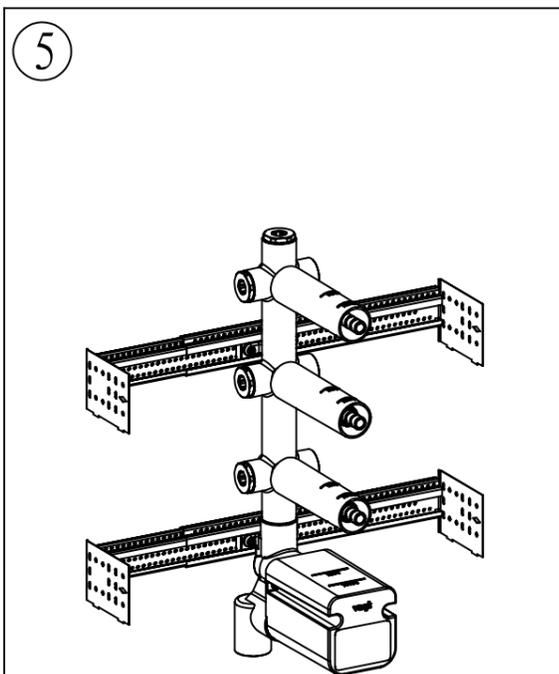

5 Next, Fold the flaps on either side of your brackets.

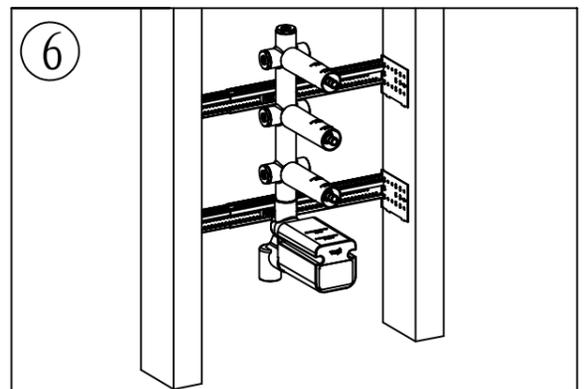


FOR 2X4 INSTALLATION

****It is imperative that the brackets are installed all the way to the back of the 2X4 frame to ensure a proper installation.****

FOR 2X6 INSTALLATION

Please follow the min and max on the valve.


Once brackets are secured onto your valve. Place your valve in between your frame. At this step please make sure that the valve is leveled both vertically and horizontally and centered accordingly. **NOTE * if valve is not levelled the trim will not fit properly which will result in having to readjust the valve placement***

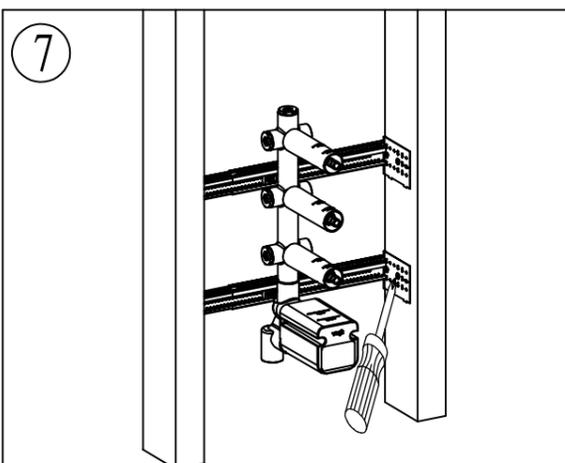


7 Secure the brackets to the frame on either side.

FOR FURTHER ASSISTANCE, PLEASE CONTACT US AT 1-888-215-8648 EXT 500 OR EMAIL US AT SERVICE@VOGTINDUSTRIES.COM


HOW TO INSTALL BRACKETS TO VE.150 VALVE

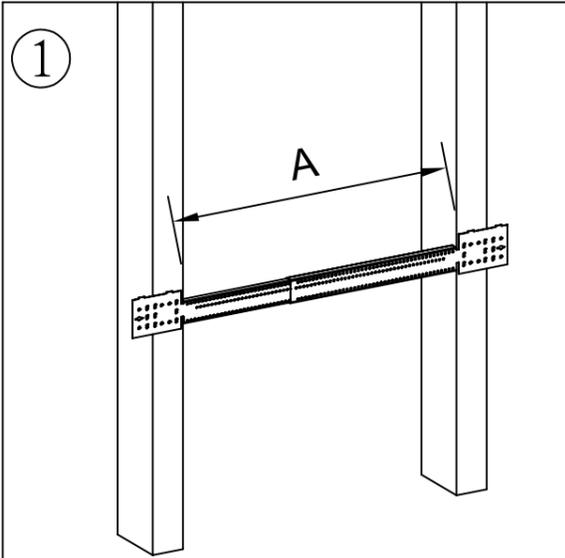


① Measure the distance(A) between your studs. Grab provided brackets adjust accordingly to the distance measured.

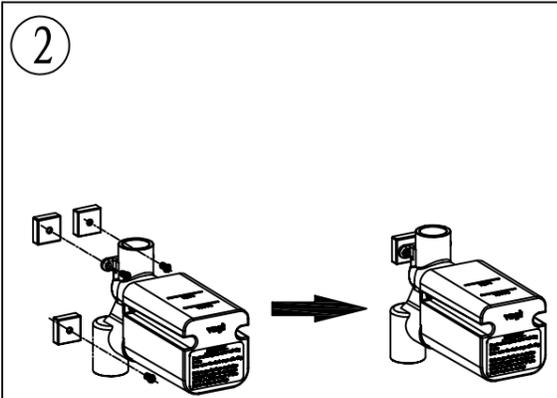


② Grab your valve which comes with the square nut and screws pre installed.

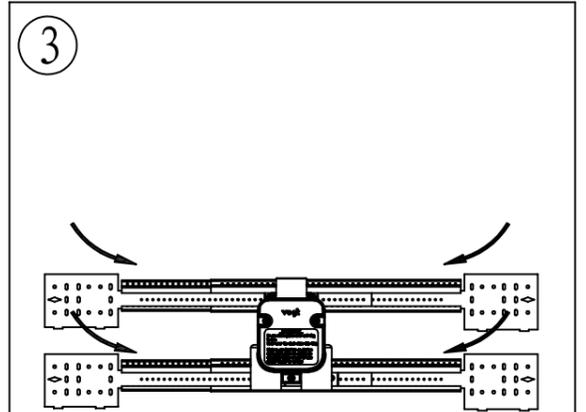


③ Once you have your valve, adjust the valve to the center of the bracket, by sliding the square nuts through the slot opening of your brackets.

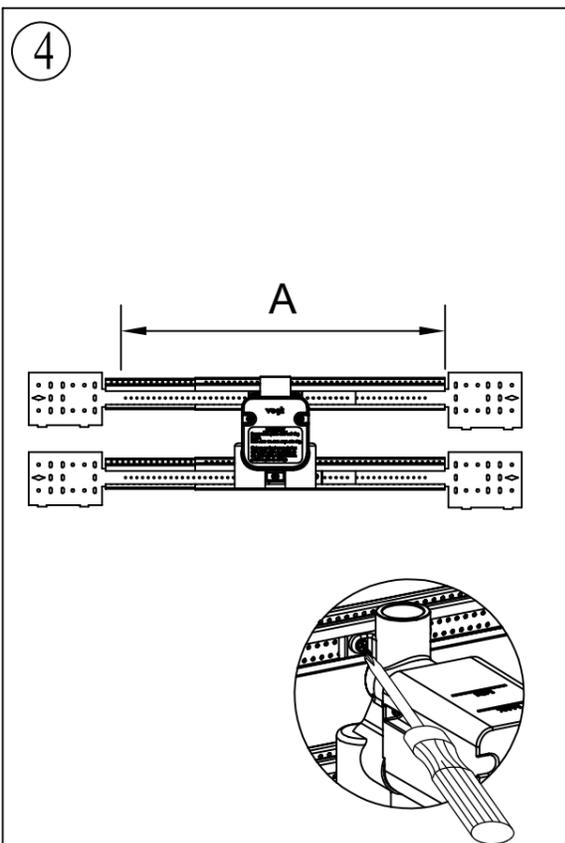

④ Once you have remeasured the length of brackets to the length of the stud frame. Fasten the valve body to the brackets.

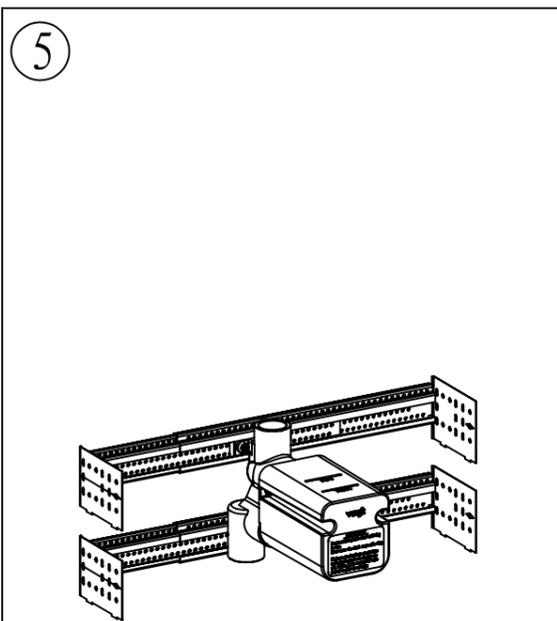

⑤ Next, Fold the flaps on either side of your brackets.

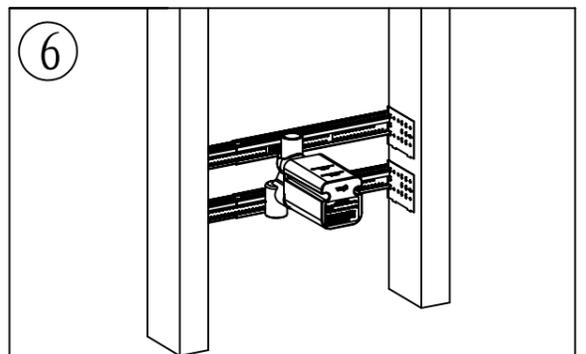


FOR 2X4 INSTALLATION

****It is imperative that the brackets are installed all the way to the back of the 2X4 frame to ensure a proper installation.****

FOR 2X6 INSTALLATION

Please follow the min and max on the valve.

Once brackets are secured onto your valve. Place your valve in between your frame. At this step please make sure that the valve is leveled both vertically and horizontally and centered **NOTE * if valve is not levelled the trim will not fit properly which will result in having to readjust the valve placement***

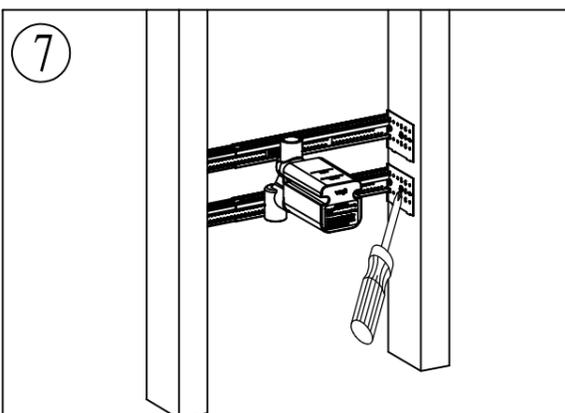

⑦ Secure the brackets to the frame on either side.

FOR FURTHER ASSISTANCE, PLEASE
CONTACT US AT 1-888-215-8648 EXT 500 OR
EMAIL US AT
SERVICE@VOGTINDUSTRIES.COM