Model Name: NIVEAU TUB FILLER
Model No: BF.NU.2200.XX

VOGTINDUSTRIES.COM

Before you begin:

- Please take note of different standards and regulations that are dictated by your local plumbing codes. This product is certified in accordance with North American building codes.
- We insist that you use services of a professional plumber with experience in the installation of similar fixtures.
- Ensure that the piping system is well secured to prevent rattling, vibration and banging noises caused by a water hammer. We also recommend that you use water hammer arrestors.
- Ensure that the interior of the water pipes is clean from debris, sand, solder and any other residue.
- Always remove cartridges and other valve components before welding. Purge the water supply system for around 30 seconds, and then carefully reinstall the cartridges.

Tools and equipment you will need:

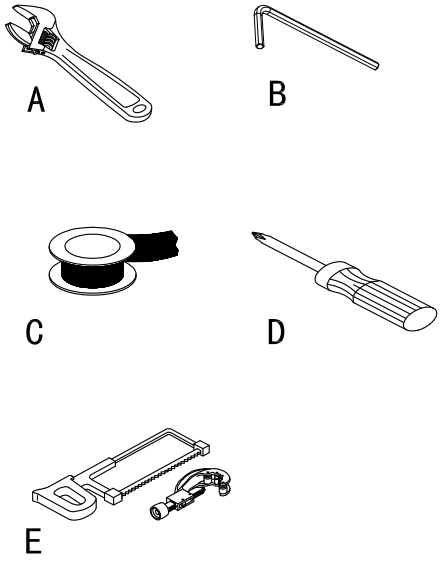

Waterway diagram:

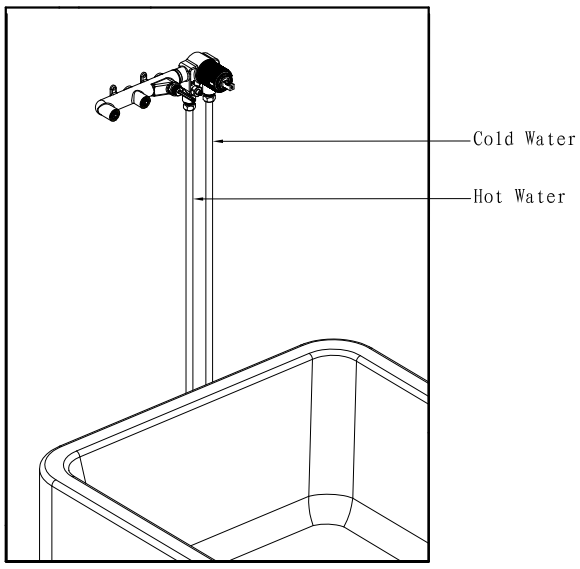

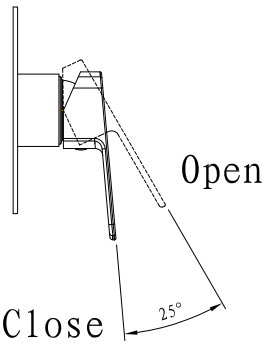

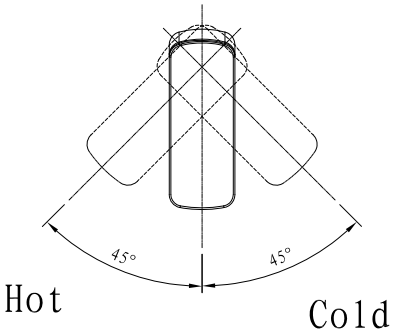

PURE QUALITY AND DESIGN

Parts/Assembly
Model Name: NIVEAU TUB FILLER
Model No: BF.NU.2200.XX

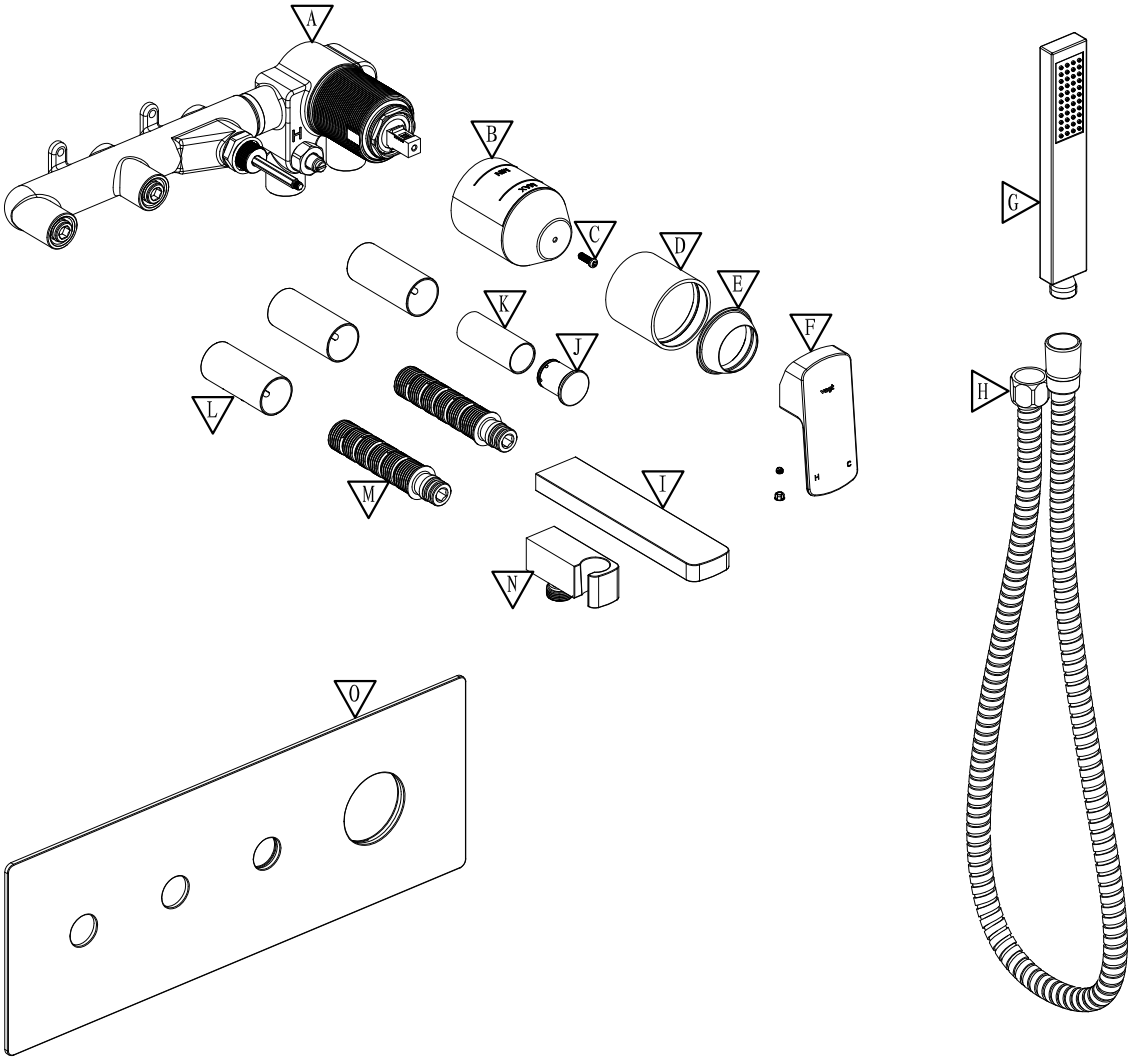

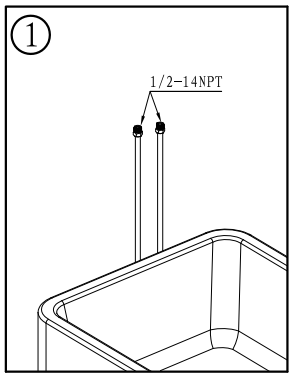
1
1/2-14NPT

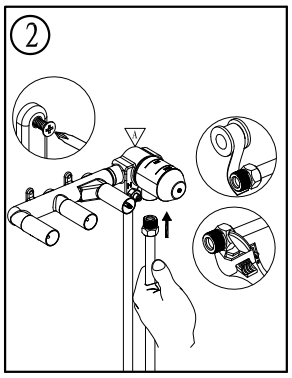
2

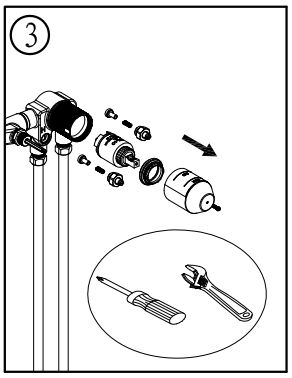
3

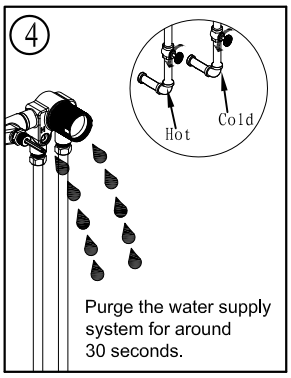
4
Hot
Cold
Purge the water supply system for around 30 seconds.

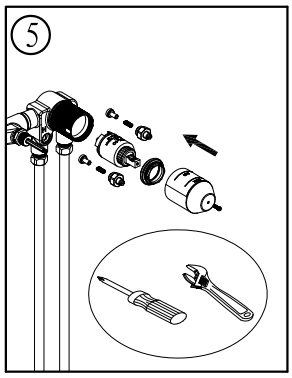
5

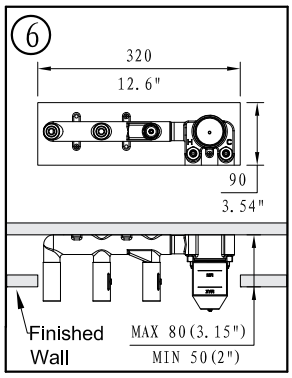
6
320
12.6"
90
3.54"
Finished Wall
MAX 80(3.15")
MIN 50(2")

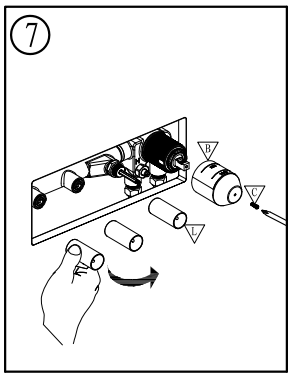
7

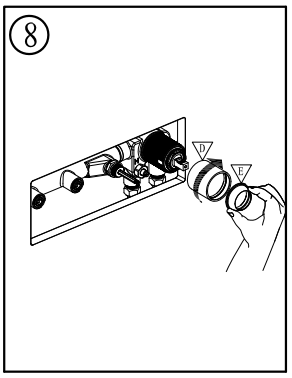
8

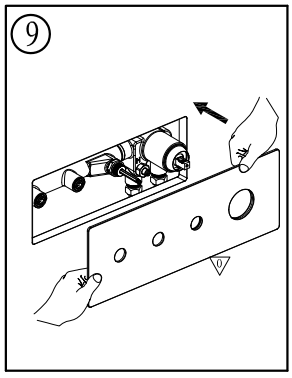
9

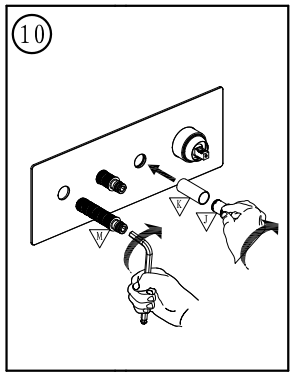
10

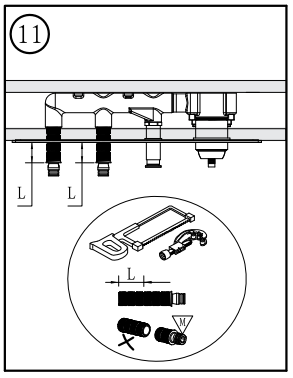
11
L
L
L

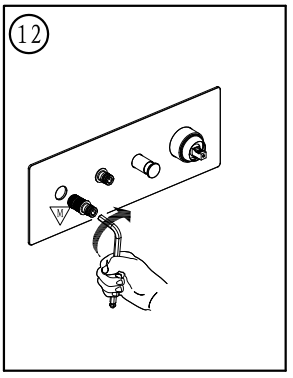
12

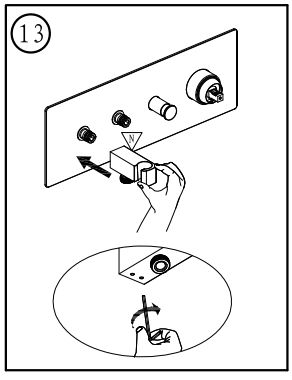
13

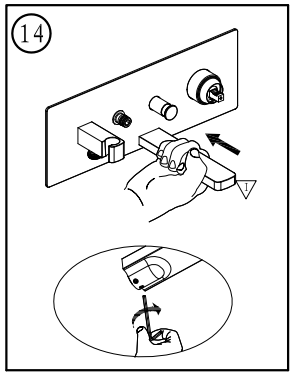
14

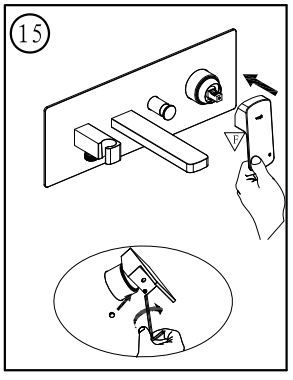
15

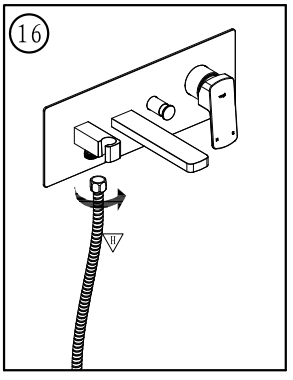
16

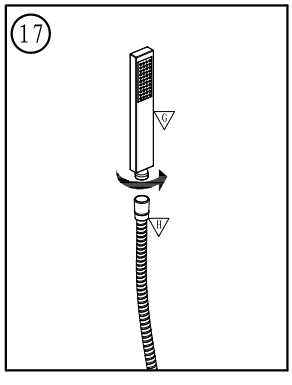
17

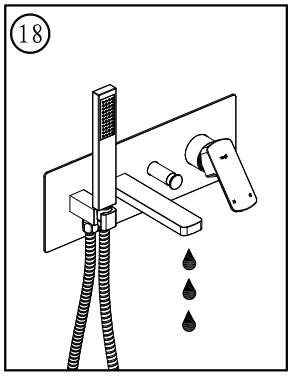
18

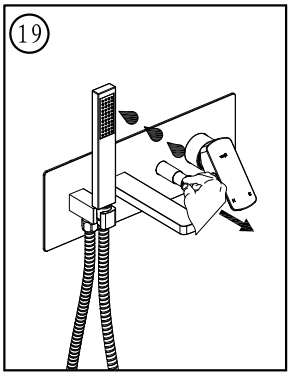
19