## Before you begin:

- Please take note of different standards and regulations that are dictated by your local plumbing codes. This product is certified in accordance with North American building codes.

- We insist that you use services of a professional plumber with experience in the installation of similar fixtures.

- Ensure that the piping system is well secured to prevent rattling, vibration and banging noises caused by a water hammer. We also recommend that you use water hammer arrestors.

- Ensure that the interior of the water pipes is clean from debris, sand, solder and any other residue.

- Always remove cartridges and other valve components before welding. Purge the water supply system for around 30 seconds, and then carefully reinstall the cartridges.
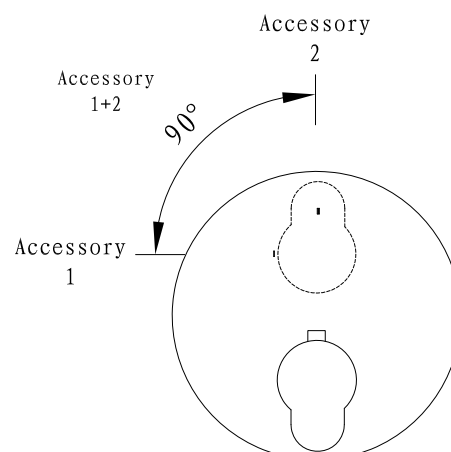
Tools and equipment you will need:

A   B

C   D

E   F

G   H
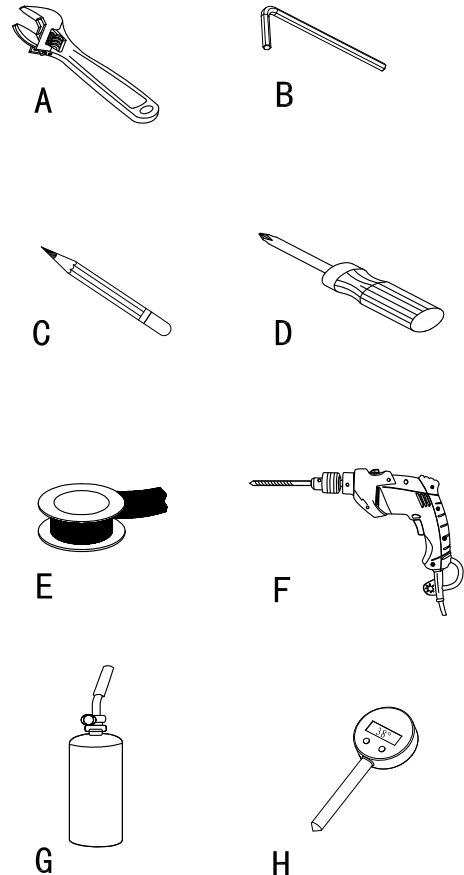
Waterway diagram:

- Accessory 2
- Cold Water
- Hot Water
- Accessory 1
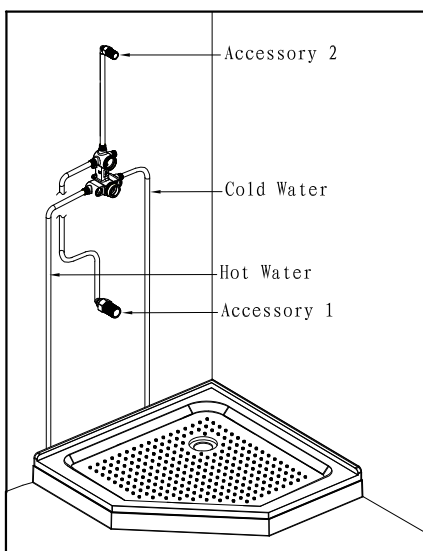
Accessories 1 & 2 can work at the same time.
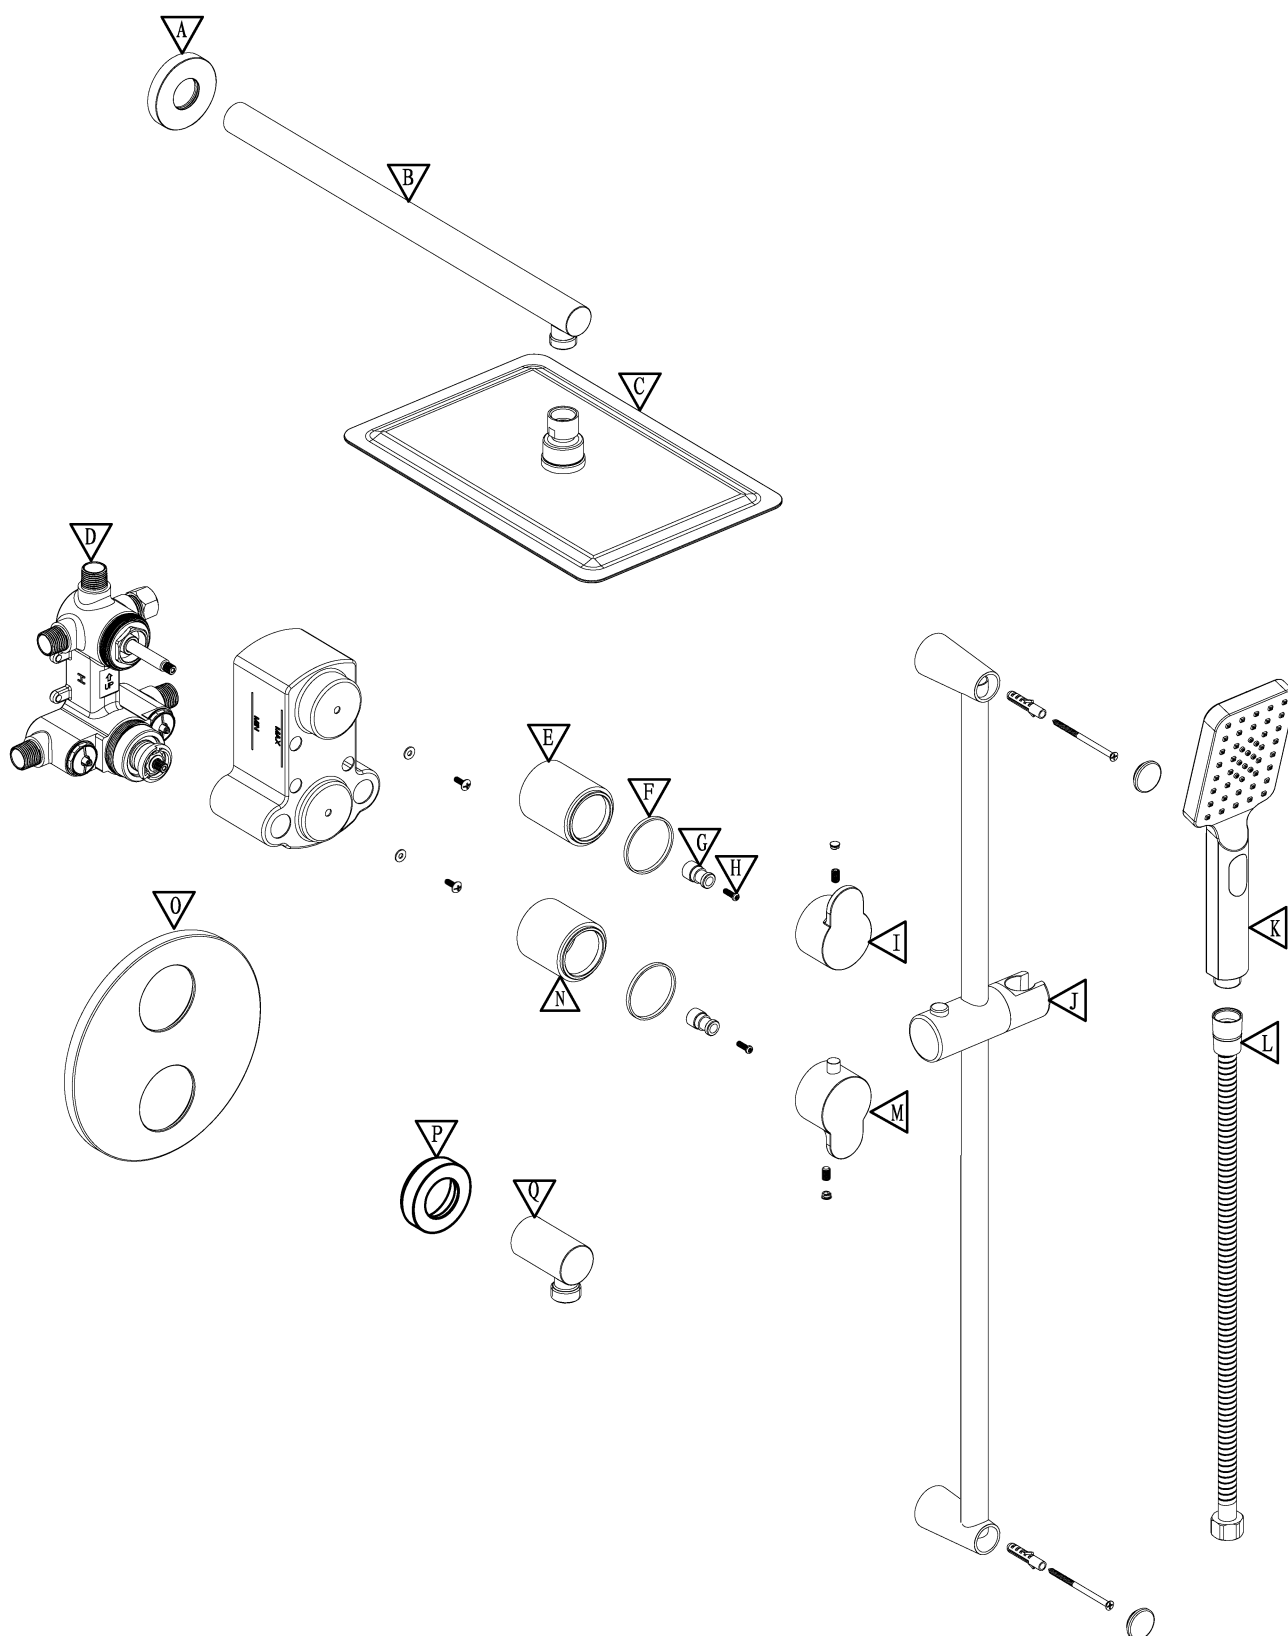

Accessory 2

Accessory 1+2

90°

Accessory 1

vogt
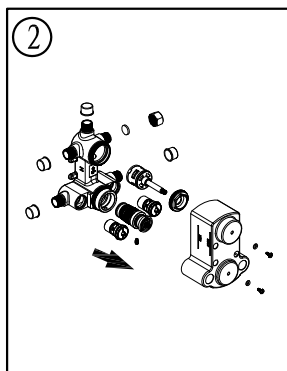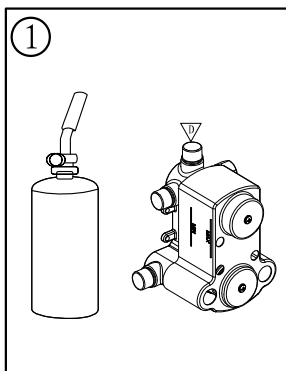
PURE QUALITY. PURE DESIGN .
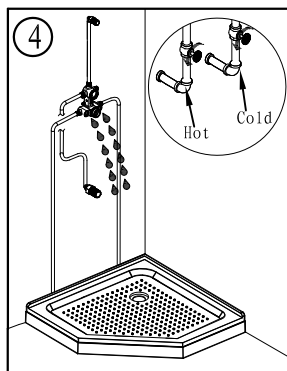
Parts/Assembly
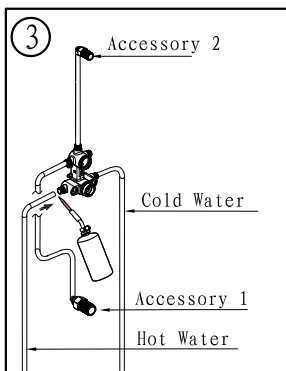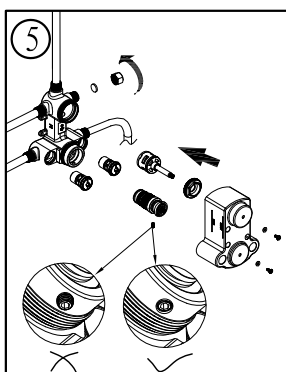Model Name: LUSTEN 2-WAY
TH SHOWER SYSTEM
Model No: SET.LN.220.210.XX

①

② If welding is involved you must remove internal valve components prior to the welding. Please note the original position of the cartridge.

③ Accessory 2

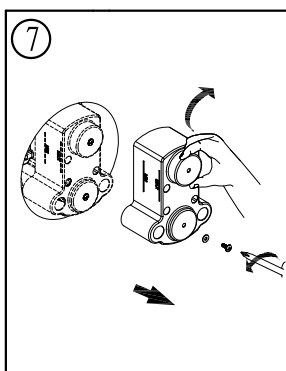Cold Water

Accessory 1

Hot Water

④ Hot   Cold

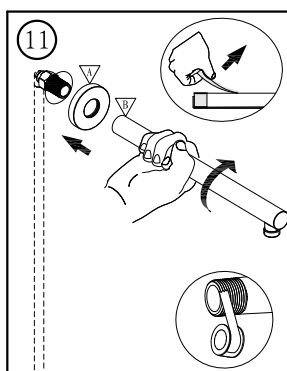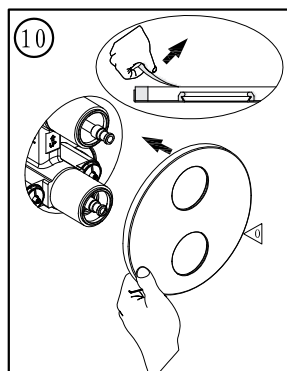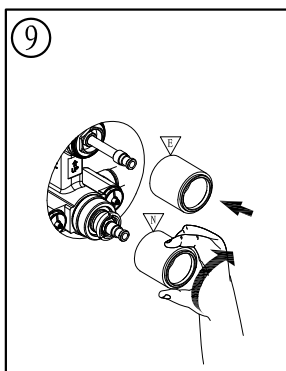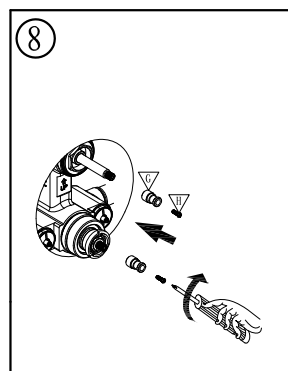Once the welding is finished, purge the water supply system for around 30 seconds.

⑤ Reinstall the valve components into their original positions.

⑥ Φ160
2.36"
Max 95(3.74")
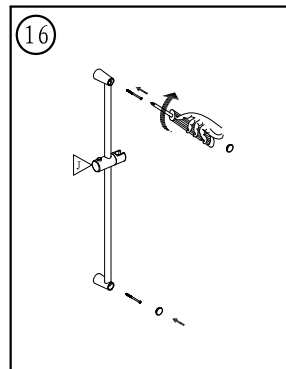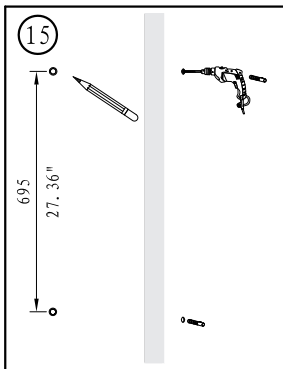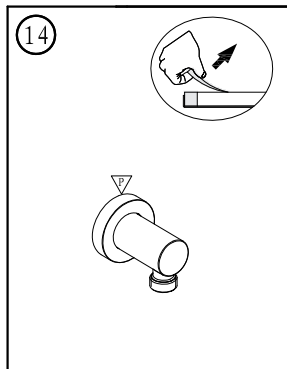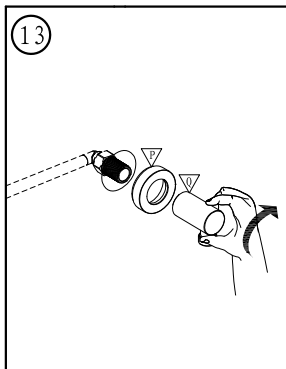Min 60(2.36")
Finished Wall
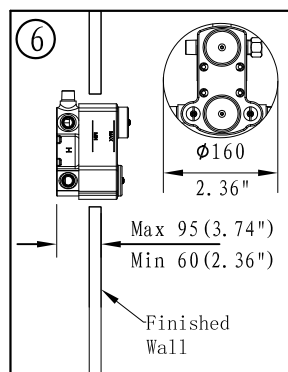
Make sure that the valve is installed in such a way that the finished wall is between the Max and Min marks.

⑦ Remove the screws and take the plastic cover off the valve.

⑧

⑨

⑩

⑪

⑫

⑬

⑭

⑮

695
27.36"

⑯

⑰

⊗
✓

⑱

Cold
Frio
Froid

Hot
Caliente
Chaud

⑲

Clockwise - Cold

Counter Clockwise-Hot

38°
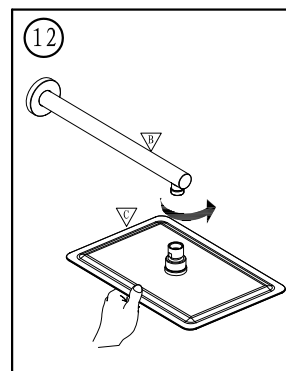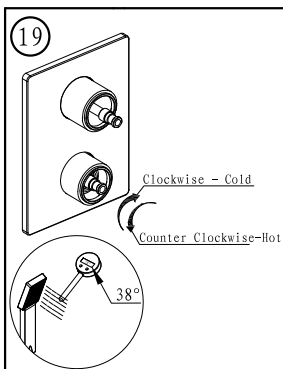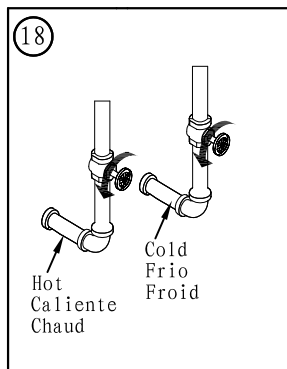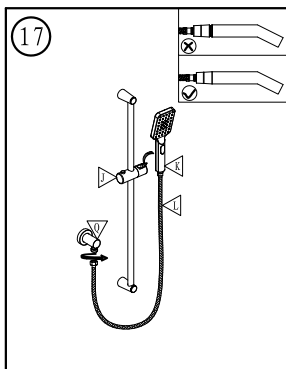
Use a thermometer to calibrate the cartridge. Make sure the water temperature is at 38° C.

⑳

㉑

Accessory
1

㉒

Accessory
1+2

㉓

Accessory
2